


WINDOW PREP

Tools Needed:


- 1" cap nails
- Hammer
- Dynaflex or silicone caulk
- Plastic window pans
- 4" DOW window flashing tape
- Utility blade/Scissors

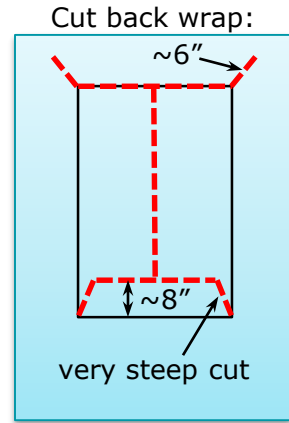

HOUSEWRAP PREP

FIRST: Housewrap should be installed.
ALSO: Window is framed to correct size

- Cut open housewrap covering window *Cut in the pattern shown on the right. Cutting steeply into the corners allows the wrap to give the sill extra protection*
- Fold housewrap to the inside on sides and bottom, and up to the outside on the top, exposing the OSB

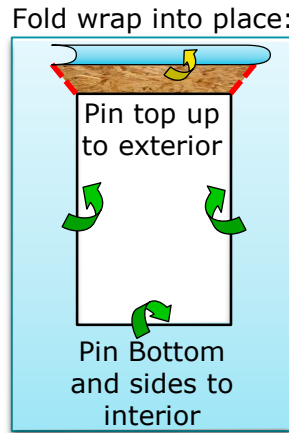

SILL PREP

- Reinforce the corners of the sill with 4" flashing tape (*where the wrap comes to a point*)
- Caulk a V-shape on the sill with caulk (Dynaflex or silicone) *Leave a ~3" gap at the center for drainage*
- Cover sill with plastic sill pans, Left and Right. *Secure pans with cap nails backed with caulk going through "X" markings, and with 4" tape securing their overlap*
- Wrap 4" flashing tape over the top of exposed plastic sills, at the sides of the window. *For double windows, make sure tape covers both tops of plastic sills*

Reinforce corners marked in yellow:

Live pictures of sills:

